


Jens Ritter

Instruments

THE RITTER "Jefferson" 4-Band Electronics

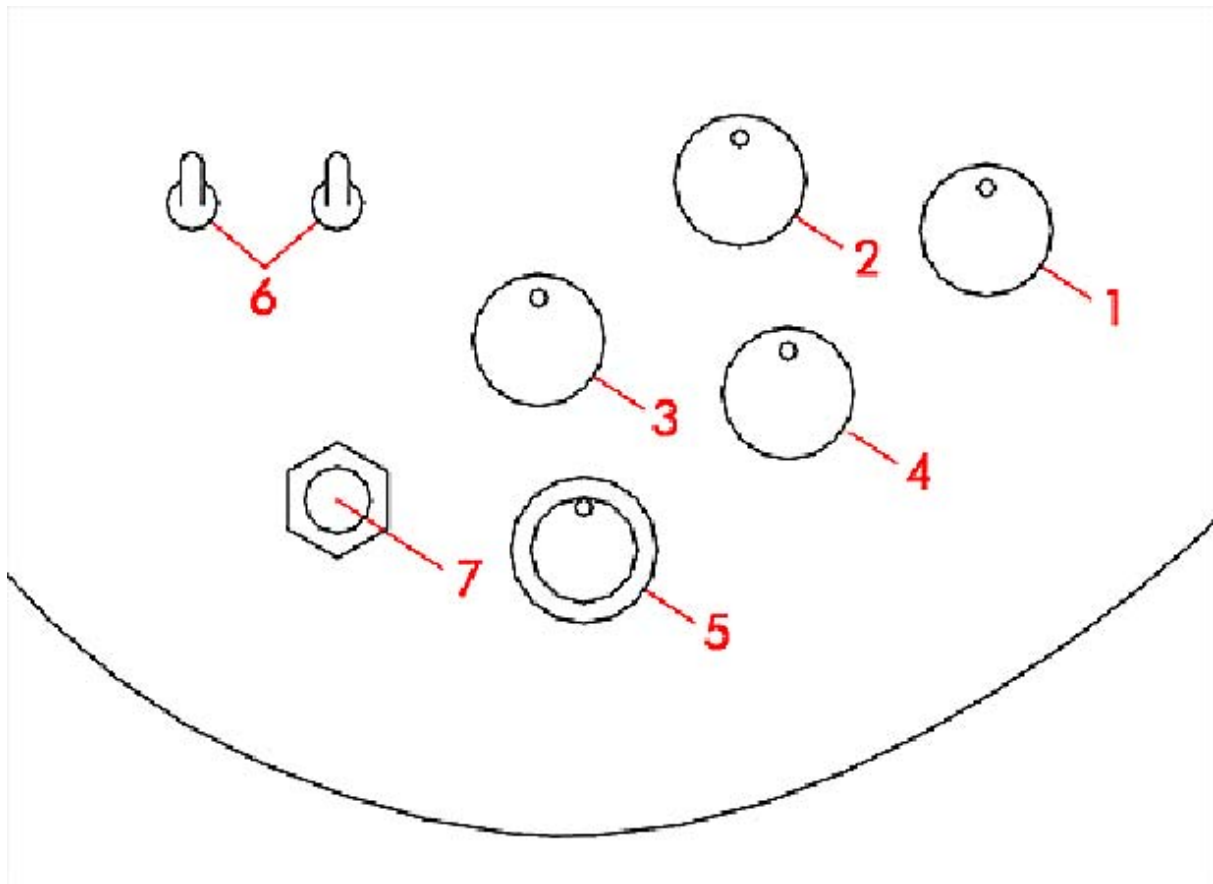

1. Master Volume (Push-Pull Potentiometer to switch between Active Mode and Passive Mode).
2. Pickup Balance.
3. Treble Cut & boost (only available in the active mode) + Tone Blend (only available in the passive mode).
4. Bass Cut & boost (only available in the active mode).
5. Dual Potentiometer for Mid Cut and Boost (on Top) and Low-Mid Frequency (Ring) (only available in the active mode).
6. Coil Switch for each MASTER BAR Pickup (Up = Humbucker / Down = "Humbucking" Single Coil).
7. Output Jack with integrated Power Switch.

The JEFFERSON ELECTRONICS is powered by 18 V (two 9V batteries).